


USE COPPER CONDUCTORS ONLY

GFCI LOOP

HIGH CURRENT GFCI

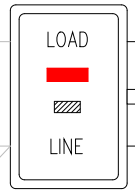

VDS CONFIGURATION

- HEATER "ON"
- PUMP "ON"
- CHECK SYSTEM FUSE
- HIGH-LIMIT TRIPPED
- SYSTEM MIS-WIRE

Manufacture Notes:

|             |               |       |     |          |    |                 |
|-------------|---------------|-------|-----|----------|----|-----------------|
| Dwg. No.    | 10000-HKQTY-J | Drawn | MBS | Rev      | 02 | Wire Color Code |
| Date        |               |       |     | 07.06.10 |    |                 |
| Diagram No. |               |       |     | 2015     |    |                 |

|            |            |
|------------|------------|
| B - Black  | G - Green  |
| Br - Brown | Bl - Blue  |
| R - Red    | V - Violet |
| O - Orange | W - White  |
| Y - Yellow | Gr - Gray  |